

*****IMPORTANT NOTICE***
RE: 80'S SERIES REMOTE STARTERS****

****Affected Models- 1180, 1280, 2280, 3280, 3285, 4280, 4285.**

ISSUE

The White/Violet GWR (Ground When Running) wire on the 3-pin bypass module connector does not activate when the system is placed into Idle Mode (Pressing “Start” while the vehicle is running).

SYMPTOM

When the system is placed into Idle Mode items using the GWR will not turn on. In the case of a bypass module, the theft light may turn on. If the GWR is being used to activate an extra Ignition or Accessory circuit it will not be powered up.

SOLUTION

Connect the Orange/White wire from the 13-pin connector along with the White/Violet wire using both wires together to activate your bypass module or relay.