

LCD DISPLAY

Setting The Time

Press and hold the **Ⓛ** and **#** buttons until the remote transmitter chimes and the minute portion of the clock begins to flash.


To change from minutes to hours, press and release the **Ⓛ** button.

To increase the minutes or hours, press and release the ***** button.

To decrease the minutes or hours, press and release the **Ⓛ** button.

Press and release the **#** button to exit or the remote transmitter will exit if there is no activity for 20 seconds.

NOTE: To set the AM/ PM icon, continue changing the hour until the appropriate icon is displayed.

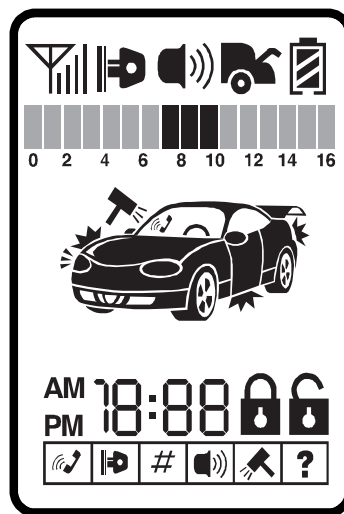

3560 & 4560