

The instructions pertaining to shock sensor programming had been “misprinted” in the 42XX and 43XX Owners Manual. Follow the instructions below to enter shock sensor programming .

## OWNER'S GUIDE

2WAY REMOTE STARTER/ ALARM

Page 6

### Alarm Features

#### Shock Sensor Programming/ Adjustment


##### To Enter Shock Sensor Programming



Press and hold buttons #1 and #2 for three seconds. The park lights will flash and the siren will chirp three times.

While the park lights are on strike the vehicle with the amount of force wanted to trigger the alarm\*. Hit the vehicle with the same amount of force three time, the siren will chirp each time the system detects the Impact

\*Strike the vehicle with the palm of the hand, be careful not to impact the vehicle in a area that may cause damage. The most common location for testing and setting the shock sensor is the A-pillar. The A-Pillar is the metal support that runs from the roof of the vehicle to the hood area. Avoid hitting the windshield when programming the shock Sensor.

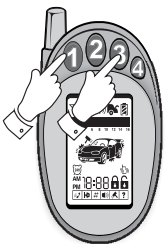

#### Temporary Shock Sensor Bypass

Press and release button #1 to arm the alarm then press and release button #3 within three seconds. The system will chirp once when the lock button is pressed and once when the start button is pressed. The shock sensor will be disabled until the system is disarmed and the rearmed again