

Transponder Bypass

Key Programming

Domestic Vehicles Only

**Must Have
2 Valid Keys**

Technical Support 866-698-5872 ext 0

Chrysler/Dodge/Plymouth

Step 1 - Insert the first valid key into the ignition switch and turn the ignition switch "ON" for 5 seconds or until the "Theft" light or LED goes out.

Step 2 - Turn the Ignition switch "OFF" and remove key

Step 3 - Insert the second valid key and turn the ignition switch "ON". Leave "ON" for about 15 seconds or until a chime and the "Theft" or LED light begin to flash.

Step 4 - Turn the Ignition switch "OFF" and remove key

Step 5 - Insert "Blank" key into the ignition switch.*

Step 6 - With help of a jumper wire, power up ignition.. After 10 seconds, a chime will sound and the "Theft" or LED lights will stop flashing, then turn solid.

* If key will not insert, place the head of the key near ignition switch.

*****The key is now programmed.*****

Note: If after 10 seconds there is no chime or the LED's and "theft" lights continues flashing, repeat steps 1-6.

Ford/Lincoln/Mercury

Step 1 - Insert the first valid key into the ignition switch and turn the ignition switch "ON" for 3 seconds.

Step 2 - Turn the Ignition switch "OFF" and remove key

Step 3 - Insert the second valid key into the ignition switch and turn the ignition switch "ON" for 3 seconds.

Step 4 - Turn the Ignition switch "OFF" and remove key

Step 5 -Insert "Blank" key into the ignition switch.*

Step 6 - With help of a jumper wire, power up ignition..

* If key will not insert, place the head of the key near ignition switch.

*****The key is now programmed.*****

Note: If the LED's or "Theft" begin flashing, repeat steps 1-6

General Motors

Step 1 - Insert the first valid key into the ignition switch and turn the ignition switch "ON" for 3 seconds.

Step 2 - Turn the Ignition switch "OFF" and remove key

Step 3 - Insert the second valid key into the ignition switch and turn the ignition switch "ON" for 3 seconds.

Step 4 - Turn the Ignition switch "OFF" and remove key

Step 5 - Insert "Blank" key into the ignition switch.

Step 6 - With help of a jumper wire, power up ignition..

* If key will not insert, place the head of the key near ignition switch.

*****The key is now programmed.*****

Note: If the LED's or "Theft" begin flashing, repeat steps 1-6