

Transmitter Programming

Use the following instruction to program remote transmitters for the 430, 431, 440, 441 and CJ Series

Follow the steps below to program the transmitters to the system s memory

Step 1 - Turn the Ignition key **ON then OFF - Leaving Key Off.**

Step 2 - Press and release the Program Button **twice then press and hold.**

Step 3 - The siren will respond with five chirps to confirm Transmitter Program Mode.

Note: If the siren does not respond, repeat Steps1&2

Step 4 - Continue to hold the Program Button and press lock button on each of the transmitter's to be programmed(Maximum of 3 Different transmitter codes).

Step 5 - The system will respond with a siren chirp each time a transmitter is programmed.

Exit - After five seconds the system will exit transmitter program mode automatically.

NOTE: *You must program ALL of the transmitters to be used at one time. For the owner's security any transmitters not programmed at this time will be erased from memory.*

***** This system will store a maximum of three transmitter codes in memory.**