

Timer Mode

Timer Mode will start the vehicle at a user selectable start interval. The vehicle can be set to start once every 2, 3 or 4 hours, for a maximum of 12 starts. The vehicle will start at the selected start interval and run for the programmed runtime*.

EXAMPLE: If the 4 hour start cycle was selected, the vehicle will start once every 4 hours and run for the programmed runtime*.

To Enter Timer Mode.

Method 1- Press and release the **#** button, then press and hold the ***** button for 6 seconds or until park lights turn on.

Method 2 - Press the **i** and ***** buttons at the same time for 3 seconds or until the park lights will turn on.

While the park lights are on the start cycle can be selected.

2 hours	Press i button	2 Park light flashes
3 hours	Press * button	3 Park light flashes
4 hours	Press # button	4 Park light flashes

NOTE: Timer Mode must be set each time the user wishes to use this feature.

To Cancel Timer Mode

Method 1- Press and release the **#** button, then press and hold the ***** button for 6 seconds.

Method 2- Press the **i** and ***** buttons at the same time for 3 seconds.

NOTE: Pressing the brake pedal or turning the ignition to the ON position will cancel Timer Mode. Cancellation will be confirmed with 2 park light flashes and 2 horn honks (optional).

Never remote start or set the Timer Mode if the vehicle is parked in a Garage or Attached Carport! (see page 4 SAFETY)

*Default 15 minutes